A38 S/N18010~ 積載設定方法 **4

	画面表示	·····································
HOURS	BCI 99%	ESC 長押し
	99 %	
21510513	ВООМ:	2回押す
HELP : PR	ESS ENTER	
21510513	↓↓ BOOM:	ENTER 押す
ACCESS L		THE MAN TO THE TENT OF THE TEN
	↓	
ACCESS L CODE 000		↑、→で1010と入力し <mark>ENTER</mark> 押す
	\downarrow	
SNORKEL		2回押す
ACCESS L	LEVEL 1	
21510513 SETUPS	воом:	<mark>ENTER</mark> 押す → 3回押す
OL TOT O	\downarrow	
SETUPS:	TUDO	ENTER 押す
LOAD SE	↓ ↓	
CELLS::	<u> </u>	<mark> →</mark> 押す
4=MOBA	11	
LOAD SE	↓ TUDS:	ENTER 押す
CALIBRATE LOAD		LIVILIX 1T 9
	$\downarrow \downarrow$	
CALIBRAT REDO LOA		↑を押し YES に表示を変えENTERを押す
	↓	
CALIBRAT	E LOAD: M LOADED?	左の画面が表示されたら荷重セットしENTERを押す
FLATFUR	M LOADED?	
CALIBRAT	E LOAD:	↑を押し YES に表示を変えENTERを押す
REDO EMP		
CALIBRAT	↓ F I OAD:	左の画面が表示されたら荷重をおろしENTERを押す
	M EMPTY?	在の画面が女かでもいうで用手でのつしLINTERで作り
	\	
CALIBRAT CAL DATE	TE LOAD: E 00/00/00	左の画面が表示されたら↑→を用いて日付を入力し ENTERを押します
	\downarrow	例:2015/05/22ならば 05/22/15
CALIBRAT FINISHED	E LOAD:	左の画面が出たら設定終了です。